


Sulky

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	1049	DECK PAN ASSEMBLY
2	1	1029	YOKE, LINKAGE
3	1	1022	FOREARM ASSEMBLY
4	6	1018	BUSHING, IRON
5	6	1023	WASHER, LARGE
6	1	1013	BOLT, SPECIAL, LINKAGE PIN
7	1	1031	NUT, LINKAGE- LOCKING
8	1	1038-1	MOUNTING BRACKET - UNIVERSAL
9	1	1037	KICK PIN
10	2	1047RB	WHEEL ASSEMBLY w/HD BEARINGS
11	2	1014	BOLT, AXLE
12	6	1025	WASHER, AXLE
13	2	1044	SPANNER BUSHING
14	2	1041	NUT, AXLE-LOCKING
16	3	1032	GREASE FITTING-1/4-28 TAPERED
17	1	1026	LINCH PIN
18	4	1418*	FLANGE HEAD CAP SCREW
19	4	11537*	FLANGE NUT
20	2	1017RB*	HEAVY DUTY ROLLER BEARING *
21	4	11039*	BEARING KEEPER *
22	1	1020	BOLT KIT INCLUDES #18 #19
23	1	7978D	Pro-Sulky / Attention Grease Label
24	1	1017RBK*	Roller Bearing Kit/w 1017RB & 11039

Note: Items 18 & 19 are sold as a kit See# 1020 Note: Items 20 & 21 are sold as a kit See # 1017RBK

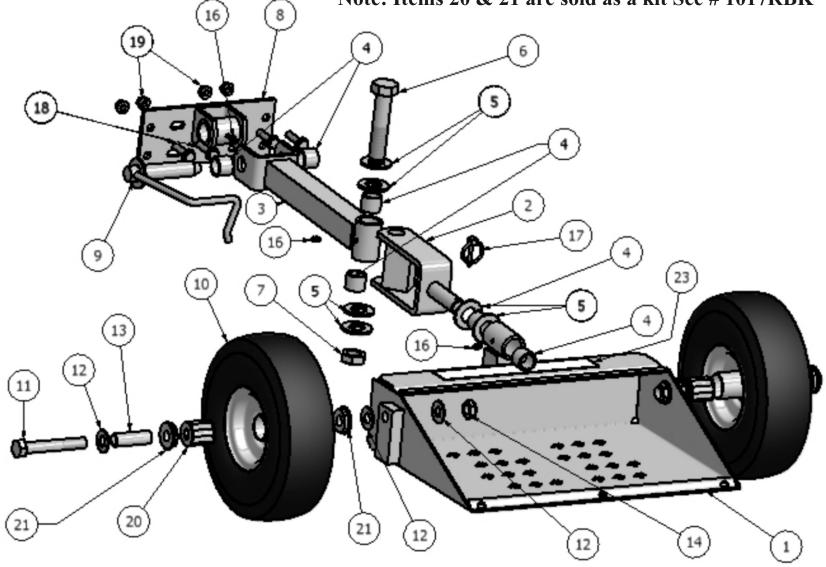



Bellevue, Ohio 44811



PS-100 Sulky


Instructions

Shipping weight Approx 45 Lbs each

Safety Warnings

Before using your sulky:

- Read, understand and follow all mower manufacturer's operation and safety instructions. You should become
 completely familiar with all safety controls and how to start and stop your mower safely. Know the location and
 function of all operator presence controls that automatically shut the mower off when you release the handles.
- 2) Use equipment at slow speeds until you become completely familiar with both mower and sulky.
- 3) Check the area before mowing with sulky. Be aware of any holes, drop-offs, tree limbs or branches, as the sulky swings out on turns and moves up and down over the terrain.
- 4) Do not operate in rough terrain or too close to obstacles.
- 5) Clear area to be mowed with sulky of any objects such as rocks, toys, wire, tree limbs, etc.
- 6) Never carry passengers.
- 7) Slow down before turning; avoid erratic operation and excessive speeds.
- 8) Do not operate sulky while under the influence of alcohol or drugs.
- 9) Wear sturdy, rough-soled work shoes. Never operate or use sulky in bare feet or sandals..
- 10) Do not use sulky near drop-offs, ditches or embankments! A wheel over the edge or an edge caving-in could cause a sudden overturn of sulky and mower.
- 11) We do not recommend staying on sulky while backing up unless your mower is a dual hydrostatic machine.
- 12) Mowing or using your sulky on all slopes requires extra caution.
- 13) Use slow speeds. Keep all movements on the slopes slow and steady. Do not make sudden changes in speed or direction. Quick acceleration or braking could cause the front of the mower to lift, tip sideways or slide, which could cause serious injury.
- 14) Avoid starting or stopping on any hillside. If tires lose traction, disengage mower blades and move slowly straight across the slope or hillside.
- 15) Do not turn on slopes unless necessary. If absolutely necessary, turn slowly and gradually across and down slope / hillside.
- 16) Do not mow or use sully on wet grass as it will increase or cause sliding.
- 17) Do not mow up or down hillsides or slopes over 10° while using sulky.
- 18) Use extra care when moving equipment on and off trailer. Do not ride on sulky when loading or unloading.

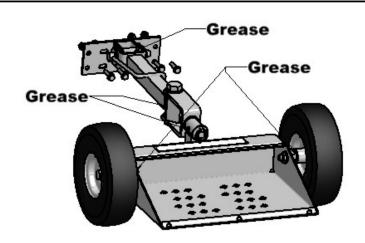

This Sulky is shipped from the factory without grease. Grease where indicated(*) before each use. Regular maintenance will insure a long service life.




Transport / Hang up guidelines

A cable hook up kit is supplied with each sulky:

Cable kit # 1011


- (a) 3 ea. Cable clamps # 1063
- (b) 1 ea. Snap Hook # 1064
- (c) 4 ft. length of cable # 1065

Due to the many different types of mower handles and the location of operator presence controls, we can only offer the following illustrated transport / hook up suggestion:

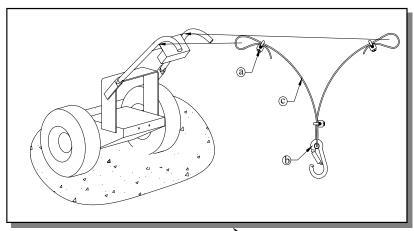

Universal Bracket installation guidelines 1038-1



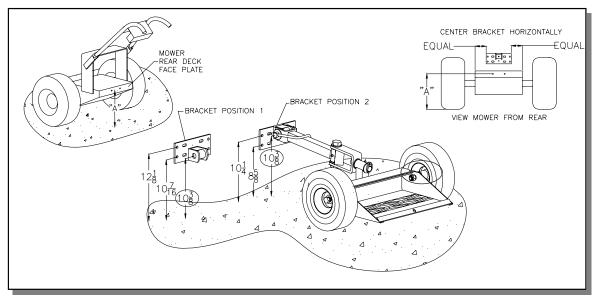

No Drill OEM Brackets available. Ask your dealer for details or call 800-9SELBRO 973-5276

- 1) Disengage the mower PTO, make sure engine is off remove the ignition key to prevent accidental starting.
- 2) As illustrated above, the mounting bracket is designed to mount on the mower rear deck pace plate.
- The bracket must be centered horizontally on the mower rear deck face plate.
- /The bracket center pin vertical dimension should be maintained at approx(10 3/8) as illustrated.
- /Clamp the bracket on the rear deck face plate. Make sure the bracket is aligned both vertically and horizontally.
- **Check the sulky deck platform for level and adjust as necessary.**
- //Drill holes using a 3/8 " drill bit. NOTE: before drilling, make sure you inspect behind the face plate for belts and pulley's.
- /After drilling, bolt the bracket in place using the supplied hardware. Be sure to use ALL Four or Six bolt as supplied.
- //Bolts can go through face plate in either direction.